

IMPORTANT INFORMATION

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC ; 2002/96/EC and 2003/108/EC; 2002/95/EC

Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

InspirationWorks UK Ltd

Charlotte Court
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK

www.inspirationworks.co.uk

www.firemansamonline.com

© 2011 CIDE Toys - www.cidetoys.com

© 2010 Prism Art & Design Limited. The Fireman Sam name and character are trademarks of Prism Art & Design Limited.


© HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.



AGE 3+

Jupiters Drive Time Fun

Instruction manual

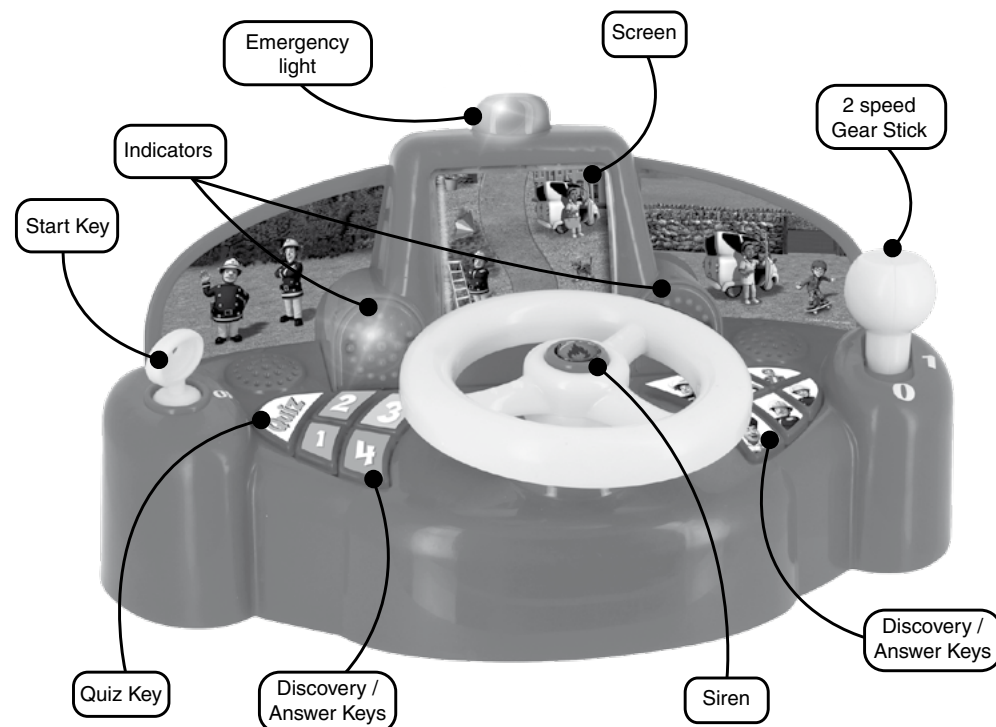

Important information

- This toy is suitable for children aged 3 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use

CONTENT

- Jupiter's wheel
- User manual

S1130

V00
March 2011
Printed in China
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD
WASTE. PLEASE RECYCLE WHERE FACILITIES
EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR
RECYCLING ADVICE

in
s
piration
works

HOW TO PLAY

To have full access to the Jupiter Drive time Fun you must first switch the button at the bottom of the unit from TRY-ME to ON.

Start Jupiter by turning the start key to the ON position...
To drive through the city move the gear stick to position 1 or 2.

At anytime you can press on the Discovery / Answer Keys and Fireman Sam will tell you what's behind it: numbers, colours and also your favourite characters and what they say...


If you press on the Quiz key, Fireman Sam will ask you a question, press on one of the ten Discovery / answer keys to answer...
If you are not sure you can move the gear stick to any other position so that Jupiter keeps going through the city. When you see what you think is the correct answer press on the corresponding answer key.

You have 3 chances to answer correctly...

AUTOMATIC SHUT OFF:
In order to save the battery life, the unit switches off after about 3 minutes of inactivity.
To re-activate the unit either move the wheel fully to the right or to the left; press any key; move the gear stick to another position.

HOW TO CHANGE BATTERIES

- 1. This product requires 3 x AA – LR6 1.5v batteries
- 2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
- 3. Insert 3 x AA – LR6 1.5v batteries into the compartment ensuring they are installed the correct way around.
- 4. The polarities are marked inside the battery compartment.
- 5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
- 6. Reassemble the battery cover and tighten the screw to secure.
- 7. Do not over tighten.

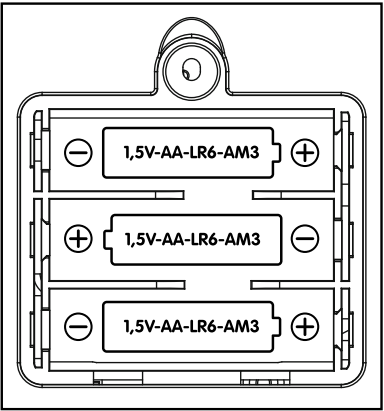

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - Rechargeable batteries shall be charged only under the supervision of an adult.
 - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

TROUBLE SHOOTING

If the unit doesn't operate...	Check that the batteries are installed correctly, or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If lights become dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.